

Honeywell Wireless Home Security System with Voice Management

Starter Kit: Quick Start-up

IMPORTANT

Before starting read all warnings in Owner's Manual on page 8, and refer to the headings indicated below.

The System will prompt you through programming and will confirm each programming step. (You will need a screwdriver and a pencil.)

Program the Control Panel

1. Open the Control Panel Door by pressing the release tab on top.
2. Install the 9-volt battery provided.
Control Panel will beep; System Voice will greet you.
3. Select and set Access Code-any 4 numbers (optional).
4. Set the System Clock with the current time.

Program the Door/Window Sensors

1. To remove cover, press release button on top of transmitter.
2. Install the two alkaline batteries provided.
3. Program Control Panel: Press Add, Sensor (until you hear location you want).
4. Program Sensor: Press program button on front of transmitter.

Program KeyChain Remote.

1. Press Add, Sensor (until you hear KeyChain Remote).
2. Press star button on KeyChain Remote.

Install Door/Window Sensors

1. Plan positioning. Align arrow on magnet with line on transmitter.

2. Affix transmitter to door or window frame.
3. Affix magnet to edge of door or window (within 3/8" of transmitter).
Use Door/Window Adapter(s) if needed.

Install the Control Panel

1. Connect Control Panel to telephone jack (cord provided).
2. Choose a place for the Control Panel, and install.
3. Plug in the transformer.

Set Home Security Functions

(Control Panel door must remain closed.)

To Arm the System:

1. Press **ARM Door & Windows**.
2. Press **ARM Motion Sensors** (if installed or if needed for 3).
3. Press **ARM Motion Sensors** again (to activate LatchKey Alert, optional).

Once System is armed, 30-second Exit Delay allows you to go out through a protected door.

To Disarm the System:

1. Press **DISARM**.
2. Or use **CODE** buttons to enter your Access Code.

Each time you re-enter your home through a protected door, 30-second Entry Delay gives you time to disarm the System.

If you set off the alarm accidentally, simply turn it off (Disarm), then turn it back on again.

To Set Home Control Functions or Check System Status:

Press appropriate buttons on Control Panel.

Program the Lighting Modules

1. Set identification code dials on fronts of units (using your screwdriver).

House Code for the entire system:

The same letter for both units (any letter except A and P).

Unit Code for each individual unit:

A different number for each, or the same one for both (any number 1-8).

2. Program House Code.

Control Panel: Press **Add, Light Control** (until you hear the House Code letter you have selected), **DONE**.

3. Program Lighting Module Operation:

To turn on light by Entry/Exit Delay (lights will stay on for 30 seconds):

Press **Add, Light Control, Unit #**(until you hear the number of the Lighting Module you are programming), **Entry/Exit Delay, DONE**.

- To turn on light by a Sensor, whenever it is triggered (light will stay on for 4 minutes):

Press **Add, Light Control, Unit #**(until you hear the number of the Lighting Module you are programming), **Sensor** (until you hear the name of the Sensor you are programming), **DONE**.

To turn on light by System Clock Timer:

Press **Add; Light Control; Unit #; (Start) Time, Hours, Minutes, DONE; (Stop) Time, Hours, Minutes, DONE**.

Install Lighting Modules

1. Switch lamp on.
2. Unplug lamp, then replug cord into Lighting Module.
3. Plug Lighting Module into wall outlet.

Select System Options (Choose any, all, or none.)

Option 1 - Siren Off

Option 2 - System Voice Off

Option 3 - Security Alert First Call

- Option 4 - Security Alert Second Call
- Option 5 - LatchKey Alert/Power Out First Alert Call
- Option 6 - LatchKey/Power Out Second Call
- Option 7 - Activate Power Out Alert
- Option 8 - Set Latchkey Time
- Option 9 - Record Message

Program System Options (including telephone numbers)

1. Press **Add**; press **Option #** repeatedly until you hear the number you want.
2. Follow System Voice for additional steps; press **DONE**.

If you do not have Touch-tone telephone service, press 0 on red keys before entering telephone numbers.

To program for calling to standard numeric pager: Press 0,1 on red keys before entering the pager telephone number.

To program for calling to a "blind connect" pager: Press 0, 2 on red keys before entering the pager telephone number.