

PRC-1

Preprogrammed & Learning Remote Control Instructions

Utilizing the Russound PRC-1 Overlays for PR-4Z Functions

Carefully remove the upper and lower overlays that come on the remote. Remove the backing from the Russound PRC-1 overlays and apply them to the remote. Carefully remove the protective clear membrane from the top of the overlays.

Programming the Remote for PR-4Z Functions

Program the remote by first turning on the PR-4Z manually. Press the "PR-4Z" and "MUTE" buttons simultaneously. Point the remote toward the PR-4Z and press the three digit code "081". Press the PR-4Z button again to store the code.

Operating the PR-4Z Preamplifier with the Remote

Pressing the "PR-4Z" button in the upper right corner of the remote accesses all the preprogrammed codes for the PR-4Z. All the functions available on the PR-4Z Keypad are available on the remote.

The remote is capable of controlling source selections on the PR-4Z by pressing one of six source buttons. Pressing these buttons will change the input on the PR-4Z. The remote can also control bass, treble, volume and "loudness" for the zone you are in. The loudness button provides more bass and treble at lower volume levels for a fuller, richer sound. The remote can turn on the zone you are in by pressing the "POWER" button, and turn off that zone by pressing the "MUTE" button. The remote also has buttons to turn on and off all zones.